


User Manual

Model: 201

English

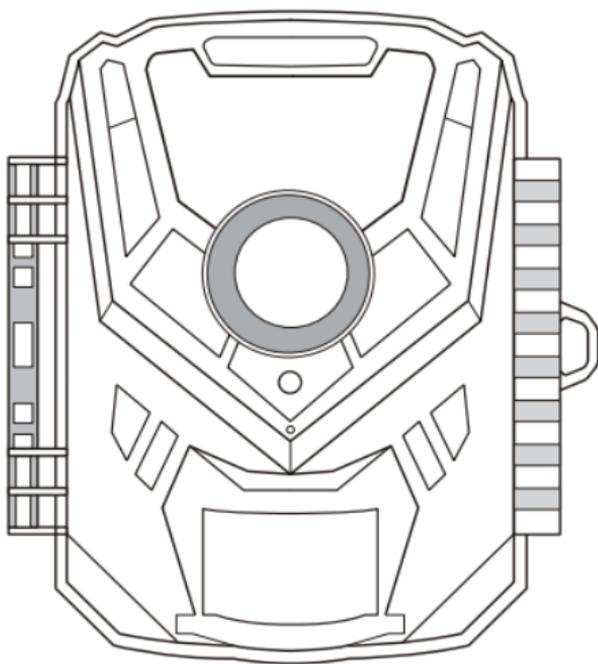

V20251125

9. FCC COMPLIANCE STATEMENT/Information to User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Please Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: To comply with the limits for an FCC Class B computing device, always use the signal cord and power cord supplied with this unit.

The Federal communications Commission warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1.IN THE BOX

1 x Camera, 1 x User Manual, 1 x USB Cable, 1 x Strap

2.Button Introduction

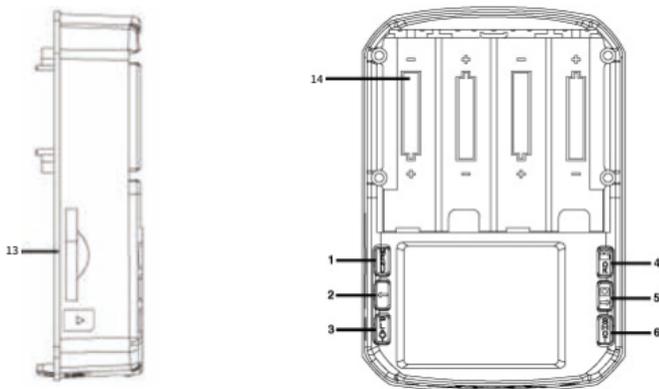

①MENU Button

②Left Button

③PLAY Button

④OK Button

⑤Right Button

⑥SHOT Button

⑦⑧⑨ON /SETUP/OFF

⑩TYPE-C Port

⑪Speaker

⑫DC Port

⑬SD Card Slot

⑭Battery Compartment

2.1. Functions And Buttons

MENU Button	<ol style="list-style-type: none">1. In SETUP mode, press Menu button to enter or exit the setting menu.2. In playback mode, press the Menu button to pop up the Delete/Protect menu.
OK Button	<ol style="list-style-type: none">1. In Setting menu, press OK button to save the settings.2. In playback mode, short press OK button to play/pause video.3. In SETUP mode, press OK button to switch into video mode.
Left Button	<ol style="list-style-type: none">1. In Setting menu and playback mode, press Left button to navigate up of the time setting.2. In the setting and playback mode, short press Left button to navigate up.
Right Button	<ol style="list-style-type: none">1. In SETUP mode, short press Right button to switch to photo mode.2. In the setting and playback mode, short press Right button to navigate down.3. In Setting menu and playback mode, press Right button to navigate up of the time setting.
Play Button	In SETUP mode, short press Play button to enter into playback interface.
Shot Button	In SETUP mode, short press Shot button to take photos or videos manually.

3. System Settings

3.1. Power on/off and system settings

After installing the batteries, toggle the switch to "**SETUP**" for menu setting.

In this mode, the infrared light is off, you can set parameters, playback, take photos and videos manually etc.

3.1.1. Toggle the switch from "**OFF**" to "**SETUP**", and the camera is on.

3.1.2. Press the **OK /Right** button to switch between photo and video modes.

3.1.3. Press the **MENU** button to enter the setting menu, press the **OK** button to save the settings.

3.1.4. Press the **Menu** button again to return back to the upper menu or exit.

3.1.5. Toggle the switch to "**OFF**", the camera turns off.

3.2. Advanced Settings

Item	Settings	Description
Mode Setting	Photo Video Photo+Video	Choose the camera working mode.
Photo Pixel	Smart Best Photo /36M/28M/20M /12M/5M/1M	Select desired resolution for still photos. Higher resolution produces better quality photos, but creates larger files that take more of the SD card capacity.
Video Resolution	Smart Best Video /2.7K/2K/1080P/ 720P	Select video resolution. Higher resolution produces better quality videos, but creates larger files that take more of the SD card capacity.

Photo Series	1 shot /2 shot/3 shot/5Shot	Select the number of photos taken in sequence per trigger.
Video Length	10 Seconds /20 Seconds/30 Seconds/1Minutes/3Minutes /5 Minutes/10 Minutes	Note: We suggest not setting the video length too long, better within 10 seconds, so it can save battery and avoid taking up too much storage space of SD card.
Record Audio	Off On	The default is "On". When "Off" is selected, the recorded video has no sound.
Shot Lag	5 Seconds/ 10 Seconds /20 Seconds/30 Seconds/1Minutes/5 Minutes /10 Minutes/30 Minutes	After the camera is triggered and shot a video/photo, the camera will not take photos/videos within the set interval. This can prevent the SD card being full with duplicate files.
Timer	Off On	When the monitoring period is on, the camera works within the set time, from the start time to the end time, but on standby at other times.
Time Lapse	Off On	Set the timing lapse interval to record the whole process of flowering, for example: if you want to observe the blooming process of plants, you can activate this function.
Date/Time	Date/Time Setting, Year/Month/-Day format setting	Use Left/Right button to change the Date format, press OK button to confirm.

Password Set	Off On	Use Left/Right button to change the data, press OK button to confirm. If forget the password, input "1111" when the camera is on, then the camera is unlocked.
Language	English,Francais,Deutsche,Itaiano,Español,简体中文,繁体中文,日本語,	This camera supports multi-languages.
Format	Cancel OK	All files will be deleted after formatting the SD card. It's highly recommended that you format the SD card in your camera for the first use.
Default Setting	Cancel OK	Select "OK" to reset to factory default setting.

3.3. Playback Mode

Remove the camera from the mounting position, toggle the switch to **"SETUP"**. Press **"Play"** button to enter Playback mode. Press **Left/Right** buttons to preview the recorded photos and videos. Press **OK** button to play/pause during the video playback. Press **Menu** button to return back to the live view interface

3.3.1. Delete Current & Delete All

Using this function, you can choose to delete the current selected photo/video & all photos or videos in the camera's memory card.

In playback mode, press **"Menu"** button to pop up the **Delete** menu, and you can choose to delete the current file or all files.

3.3.2. Protect

In playback mode, press "**Menu**" button to pop up the **Protect** menu. Using this function, you can prevent accidental deletion of documents, and you can choose to lock the current file, all files or unlock the current file or all files.

4. Mounting And Positioning

4.1. If you want to mount the camera on the wall.

4.1.1. Mark the installation position with the help of metal plate and punch holes in the wall.

4.1.2. Put the green component into the hole.

4.1.3. Fix the mounting kit according to the method in the picture.

4.1.4. Place the camera in the position of your choice and fix the camera in the position of your choice.

4.2. If you want to mount the camera on the tree.

4.2.1. Pass the mounting strap through the bracket on the back of the camera. Tie it to a tree. Adjust the position of the camera.

4.2.2. If you are worried that the camera will fall, you can also use the mounting kit together with the strap to ensure that the camera is firmly fixed in the correct position.

4.3. Calibrate the camera installing position

4.3.1. To verify that the camera effectively monitors the selected area, pull the switch to "SET" and mount the camera.

4.3.2. Within the monitoring area you want, try different distances and angles to move repeatedly around the camera, the LED lights flash to prove within the monitoring range.

The LED light does not flash to prove outside the monitoring range.

4.3.3. The test results will help you find the best location to install the camera.

4.3.4. The height of the camera from the ground should be different according to the size of the animals. In general, 1-2 meters' high is preferred.

4.3.5. Make sure the camera is working without any interference, and should avoid direct sunlight or places close to branches. When mounting the trail camera, be sure to choose a good angle and position to ensure that you can get the best image during the day. If the camera is pointed at the sun, it will appear some glare.

5. USB Connection

When connect the camera to a PC via USB cable, the camera will turn on automatically.

The camera is automatically installed on the computer and named as "Removable Storage Device"

5.1. Double-click the device to detect the folder "DCIM".

5.2. Photos and videos are located in sub-folders of the "DCIM" folder.

5.3. You can copy or move photos and videos on your computer, or you can insert the memory card into a card reader on your computer.


6. Technical Specifications

Display	2.0 inches LCD screen
Photo Resolution	Smart Best Photo/36M/28M/20M/12M/5M/1M
Video Resolution	Smart Best Video/2.7K/2K/1080P/720P
Language	English、Francais、Deutsche、Italiano、Español、日本語、简体中文、繁体中文
Memory card	Display2.0 inches LCD screen
USB	TYPE-C
DC Power Supply	External DC power supply above 6V/2A can be supported (Size: head diameter 3.5mm* needle core 1.35mm).
Battery	4X1.5 AA alkaline battery
Microphone	Built-in
Speaker	Built-in
Working temperature	-20°C to +60°C
Measurement	110x88x61MM

ユーザーマニュアル

モデル: 201


ジャパニーズ

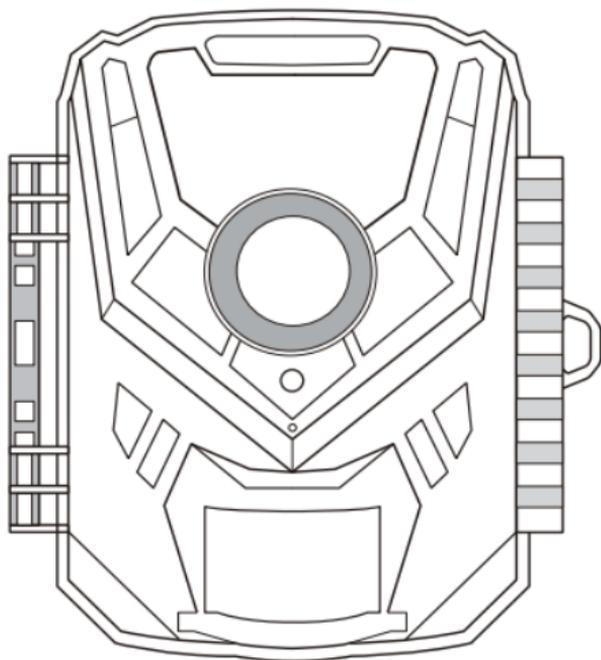

1.箱の中身

1 x カメラ, 1 x ユーザーマニュアル, 1 x USBケーブル, 1 x ストラップ

2. ボタンの紹介

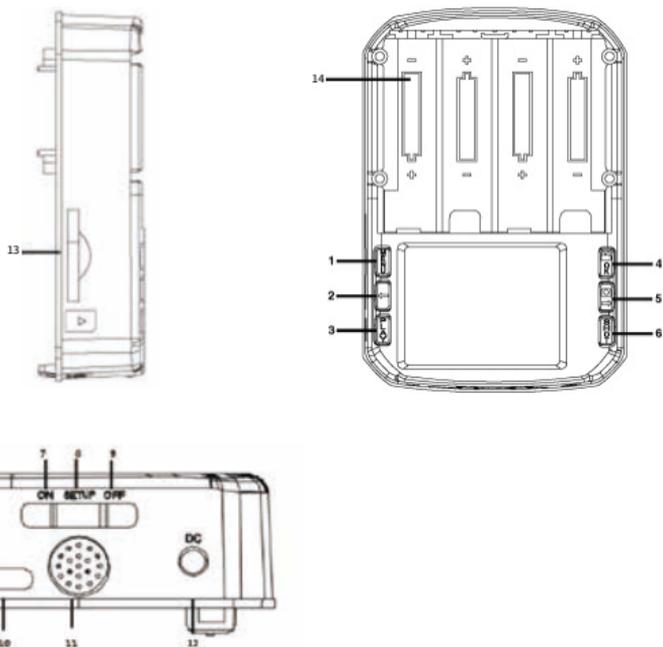

①MENUボタン

②左ボタン

③PLAYボタン

④OKボタン

⑤右ボタン

⑥SHOTボタン

⑦⑧⑨ON /SETUP/OFF

⑩TYPE-Cポート

⑪スピーカー

⑫DCポート

⑬SDカードスロット

⑭バッテリー収納部

2.1.機能とボタン

MENU ボタン	<ol style="list-style-type: none">1.設定モードで、メニューボタンを押して設定メニューを開いたり閉じたりします;2.再生モードでは、メニューボタンを押すと削除/保護メニューが表示されます。
OK ボタン	<ol style="list-style-type: none">1.設定メニューで OK ボタンを押すと設定が保存されます。2.再生モードで OK ボタンを短押しすると、ビデオの再生/一時停止ができます。3.設定モードで OK ボタンを押すとビデオモードに切り替わります
左 ボタン	<ol style="list-style-type: none">1.設定メニューと再生モードで、左ボタンを押して時間設定の上に移動します。2.設定と再生モードで左ボタンを短押しすると上に移動します。
右 ボタン	<ol style="list-style-type: none">1.設定モードで右ボタンを短押しすると写真モードに切り替わります。2.設定と再生モードで右ボタンを短押しすると下に移動します。3.設定メニューと再生モードで、右ボタンを押して時間設定の上に移動します。
PLAY ボタン	設定モードで PLAY ボタンを短押しすると再生インターフェースに入ります。
SHOT ボタン	設定モードで SHOT ボタンを短押しすると、手動で写真やビデオを撮影できます。

3. システム設定

3.1. 電源のオン/オフとシステム設定

バッテリーを設置した後、メニュー設定のためにスイッチを「**SETUP**」に切り替えます。

このモードでは赤外線ライトがオフになり、パラメータの設定、再生、手動での写真撮影や動画撮影などができます。

3.1.1. スイッチを「**OFF**」から「**SETUP**」に切り替えると、カメラがオンになります。

3.1.2. **OK**ボタン/右ボタンを押して写真モードとビデオモードを切り替えます。

3.1.3. **MENU**ボタンを押して設定メニューに入り、**OK**ボタンを押して設定を保存します。

3.1.4. 再びメニューボタンを押して上位メニューに戻るか、または終了します。

3.1.5. スイッチを「**OFF**」に切り替えると、カメラがオフになります。

3.2. 詳細設定

項目	設定 (太字はデフォルト)	説明
モード設定	写真 ビデオ 写真+ビデオ	カメラの作動モードを選択します。
写真のピクセル	スマートベスト オート /36M/28M/20M /12M/5M/1M	希望する解像度を選択して静止画を撮ります。 高解像度は高品質の写真を生成しますが、ファイルサイズが大きくなりSDカードの容量を多く消費します。

ビデオ解像度	スマートベストビデオ /2.7K/2K/1080FHD/720P	ビデオ解像度を選択します。高解像度は高品質のビデオを生成しますが、ファイルサイズが大きくなりSDカードの容量を多く消費します
連写	1ショット/2ショット/3ショット/5ショット	トリガーごとに撮影される写真の枚数を選択します。
録画時間	10秒/20秒/30秒/1分/3分/5分/10分	注: ビデオの長さはあまり長く設定しないことをお勧めします。10秒以内が望ましく、バッテリーを節約しSDカードのストレージを過度に使用することを避けられます。
音声録音	オフ オン	デフォルトは「オン」です。「オフ」を選択すると、録画されたビデオには音声が含まれません。
作動間隔	5秒/10秒/20秒/30秒/1分/5分/10分/30分	カメラがトリガーされて動画/写真を撮影した後、設定された間隔内には写真/動画を撮影しません。これによりSDカードが重複ファイルでいっぱいになるのを防ぎます。
タイマー	オフ オン	監視期間がオンのとき、カメラは設定された時間内で動作し、開始時間から終了時間まで働きますが、それ以外の時間はスタンバイ状態です。
タイムラプス	オフ オン	タイムラプス間隔を設定して、例えば植物の開花プロセスを観察したい場合、この機能を有効にします。
日付/時間	日付/時間設定、年/月/日の形式設定	左/右ボタンを使って日付形式を変更し、OKボタンで確認します。

パスワード 設定	オフ オン	データを変更するには左/右ボタンを使用し、OK ボタンで確認します。 パスワードを忘れた場合、カメラがオンの状態で 「1111」と入力すると、カメラのロックが解除さ れます。
言語	English,Fran- cais,Deutsche, Italiano, Español, 简体中文,繁体 中文,日本語,	このカメラは多言語に対応しています。
フォーマット	キャンセル OK	SDカードをフォーマットするとすべてのファイル が削除されます。初回使用時にはカメラでSDカ ードをフォーマットすることを強く推奨します。
デフォルト 設定	キャンセル OK	「OK」を選択すると工場出荷時の設定にリセッ トされます。

3.3. 再生モード

カメラを取り付け位置から外し、スイッチを「SETUP」に切り替えます。
"Play" ボタンを押して再生モードに入ります。左 / 右ボタンで録画され
た写真やビデオをプレビューします。OK ボタンを押してビデオ再生中
に再生 / 一時停止します。メニューボタンを押してライブビューインター
フェースに戻ります。

3.3.1. 現在のファイルの削除 & 全てのファイルの削除 II

この機能を使用すると、選択された写真 / ビデオとカメラのメモリーカー
ドにある全ての写真やビデオを削除することができます。

再生モードで「メニュー」ボタンを押すと削除メニューが表示され、現
在のファイルまたは全てのファイルを削除することが選択できます。

3.2.2. 保護

再生モードで「メニュー」ボタンを押すと保護メニューが表示されます。この機能を使用すると、ドキュメントの誤削除を防ぎ、現在のファイル、全てのファイルのロックを選択するか、または現在のファイルや全てのファイルのロックを解除することができます。

4. 取り付けと配置

4.1. カメラを壁に取り付けたい場合。

4.1.1. 金属プレートを使って取り付け位置をマークし、壁に穴を開けます。

4.1.2. 緑の部品を穴に入れます。

4.1.3. 写真の方法に従って取り付けキットを固定します。

4.1.4. 選択した位置にカメラを置き、選択した位置にカメラを固定します。

4.2. カメラを木に取り付ける場合

4.2.1. カメラ背面のブラケットに取り付けストラップを通します。それを木に結び付けて、カメラの位置を調整します。

4.2.2. カメラが落下することを心配する場合、ストラップと一緒に取り付けキットを使用して、カメラが正確な位置にしっかりと固定されていることを確認できます。

4.3. カメラの取り付け位置を調整する

4.3.1. カメラが選択したエリアを効果的に監視していることを確認するために、スイッチを「SET」に引き、カメラを取り付けます。

4.3.2. 監視したいエリア内で、異なる距離と角度でカメラの周囲を繰り返し動き回ります。LEDライトが点滅すると監視範囲内であることを示し、LEDライトが点滅しない場合は監視範囲外であることを示します。

4.3.3. テスト結果は、カメラを取り付ける最適な位置を見つけるのに役立ちます。

4.3.4. カメラの地上からの高さは、動物の大きさによって異なりますが、一般的には1-2メートルの高さが好ましいです。

4.3.5. カメラが何も妨害されずに動作していることを確認し、直射日光や枝の近くの場所は避けてください。トレイルカメラを取り付けるときは、日中に最適な画像を得るために良い角度と位置を選ぶことが重要です。カメラが太陽を向いている場合、まぶしさが発生することがあります。

5.USB 接続

カメラを USB ケーブルで PC に接続すると、カメラは自動的にオンになります。

カメラはコンピュータ上で「取り外し可能なストレージデバイス」として自動的にインストールされます。

5.1. デバイスをダブルクリックして「DCIM」フォルダを検出します。

5.2. 写真やビデオは「DCIM」フォルダのサブフォルダに位置しています。

5.3. コンピュータ上で写真やビデオをコピーまたは移動することができますし、メモリカードをコンピュータのカードリーダーに挿入することもできます。

6.技術仕様

ディスプレイ	2.0インチLCDスクリーン
写真解像度	スマートベストフォト/36M/28M/20M/12M/5M/1M
ビデオ解像度	スマートベストビデオ/2.7K/2K/1080FHD/720P
言語	English、Francais、Deutsche、Italiano、Español、日本語、簡体中文、繁体中文
メモ리카ード	SDカードを最大128GBまでサポート
USB	TYPE-C
DC電源	外部DC電源をサポート（6V/2A以上、サイズ：頭部直径3.5mm×針芯1.35mm）。
バッテリー	4X1.5 AAアルカリ電池
マイクroフォン	内蔵
スピーカー	内蔵
作業温度	-20℃ から +60℃
寸法	110x88x61MM